




# CT51-VL02

## Active System Adapter/ Amp Bypass Lead for Volvo Vehicles

### Application

Volvo XC90 2002>  
For vehicles with amplified systems

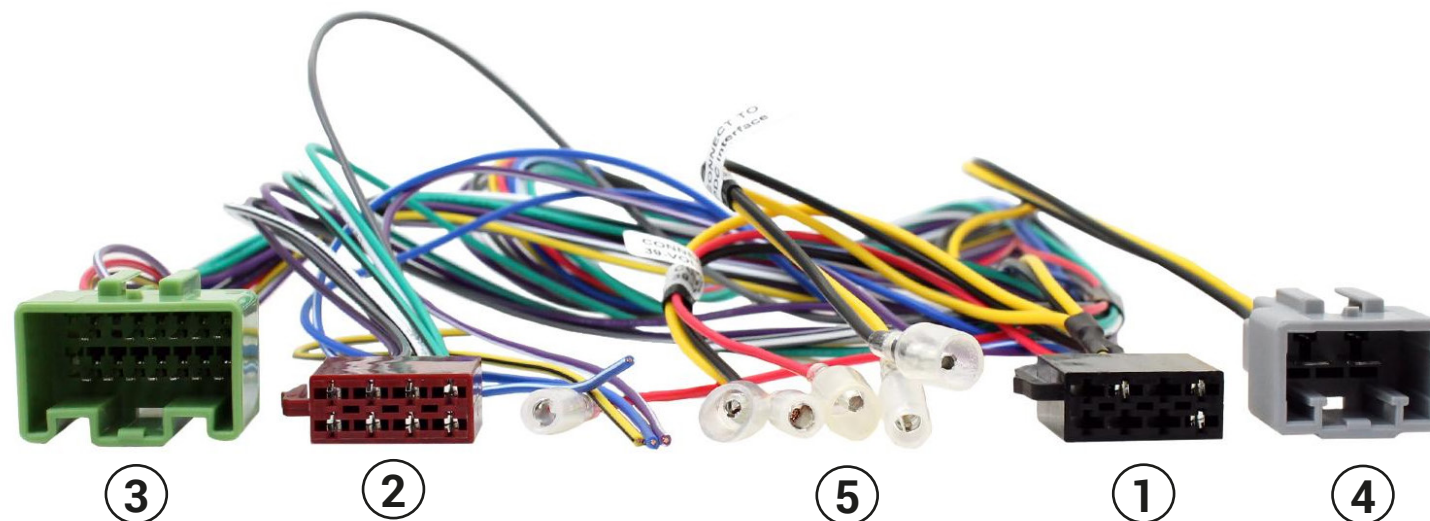

### Installation

1. Connect the black and brown ISO connectors (1, 2) to the aftermarket head unit at the dashboard.
2. Feed the extension down underneath the driver's seat and disconnect the green and grey connectors at the amplifier.
3. Connect the green (3) and grey (4) connectors from the CT51-VL02 to the connections at the amplifier.

Note: Extra wires are supplied (blue/white, yellow/black, blue, purple/white) for the retention of the original subwoofer (if required).

Note: The additional flying wires (5) can be used with a steering wheel control interface or parking sensor retention interface to retain these functions (if required).